



The Clear Choice
Water Filtration Systems

www.aquafilter.com

EXCITO-WAVE

**4 Stage Ultrafiltration System
based on "TWIST" Cartridge Type**

General Description:

EXCITO-WAVE The Quick Twist four stage undersink water filtration system with ultrafiltration membrane (UF) is ideal for kitchens with limited under sink space.

It features a State-of-the-Art 'Twist-On-Off' cartridge system, ensuring quick, easy removal and replacement of the cartridges.

The Aquafilter Four Stage Under Sink System has set the standard for water filters.

Unlike conventional units, filter housings are not required when using Quick-Twist cartridges.

Apart from food, people today depend on water for healthy life. When water becomes contaminated, individuals may be exposed life-threatening illnesses.

Setting up the **EXCITO-WAVE** filter for your house makes a superb start.

Features:

- High quality
- Competitive Pricing
- Hand Built & Factory Tested
- Hygienic Twist-off Cartridges
- Fast product delivery
- Innovative **BACINIX** nanosilver technology, providing antibacterial protection
- Made in EU
- Compact, undercounter, and apartment size
- Designed to remove contaminants of small pore size (0.02 micron) - capillary technology - ultrafiltration UF
- Innovative TWIST type quick change water filter cartridges
- Manufactured from FDA CFR-21 compliant materials
- Four Stages of Filtration
- Quick Cartridge replacement
- Easy Maintenance
- Easy to install with System Specifications
- Systems equipped with modern faucet and all installation accessories
- The EXCITO-WAVE QuickTwist type Under Sink DIY package comes complete and ready to install

Recommendations for Use:


- Point-of-Use (POU) systems can filter out bad tastes, colors or odors, which pose no health risk but still affect the water quality
- This system will improve the flavor of water used for drinking and cooking
- Perfect for almost any household and will easily fit into any space
- Kitchen compact, undercounter, home and apartment
- Recommended for Families



Made in EU



Cartridge exchange is quick and easy

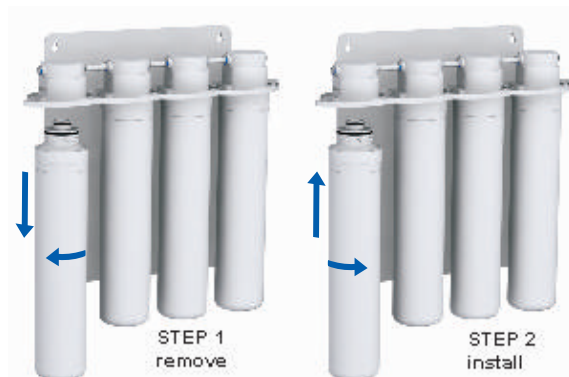



The Clear Choice
Water Filtration Systems

www.aquafilter.com


EXCITO-WAVE

**4 Stage Ultrafiltration System
based on "TWIST" Cartridge Type**



Specifications:

Dimensions (H x W x L): 399 x 90 x 345 (mm)
Connection adapter: 1/2"
Working Temp.: 2°C - 45°C (35°F - 113°F)
Working Pressure: 4 bar (60 PSI)
Flow Rate: 2.0 /min (0.6 gpm)

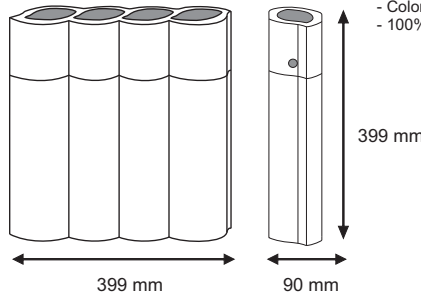

The package contains:


- Cartridge Type include in set EXCITO-4: AIPRO-1M-TW, AISTRO-L-TW, FCCBL-S-TW, TLCHF-TW
- UF membrane element type: TLCHF-TW
- Long Reach Chrome Faucet: FXFCH17-C
- Feed water connector 1/2"
- 1/4" inch Tubing for System Connection
- Completely Assembled
- Manual instructions
- Color box
- 100% Factory Tested and Sterilized Ready for Installation



In each filter cartridge, Aquafilter uses innovative **BACINIX™** nanosilver technology, providing anti-bacterial protection.

CATALOG#	STAGE	COMPONENT	FUNCTION
AIPRO-1M-TW	1	Sediment Spun-bounded polypropylene	Removes suspended impurities like particles, rust and sediment not less than 5 microns.
ASTRO-L-TW	2	Ion exchange High quality ion exchange resin	Step 1: Water hardness reduction. Step 2: Reduces the concentration of iron.
FCCBL-S-TW	3	Carbon Block Cartridge Extruded activated carbon with other treatment filtration media	Step 1: Removes chlorine, color, odor and other organic impurities. Step 2: Reduces the levels of iron, heavy metals, pesticides, organic substances, improves taste and odor.
TLCHF-TW	4	Ultrafiltration membrane (UF) Ultrafiltration separation mechanism is commonly attributed to the pore size of the membrane as low as 0,02 micron.	Rejects or separates high molecular weight solutes as well as suspended solids, colloids, and macromolecules, bacteria and some viruses.

Additional accessories

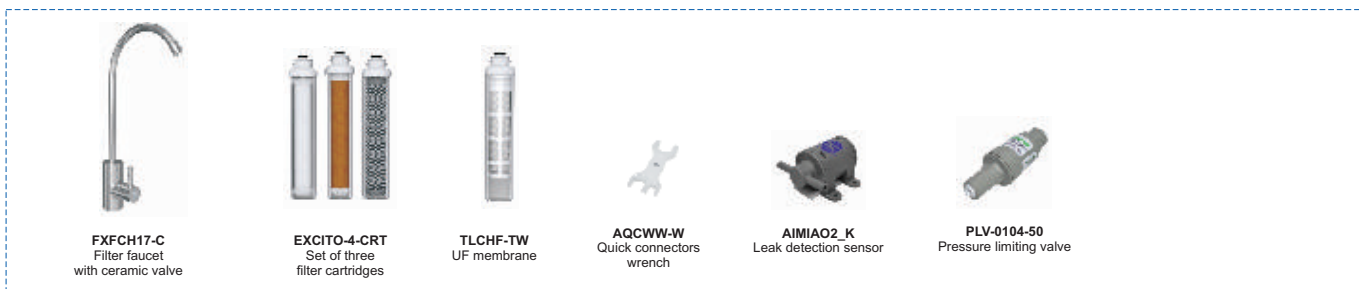

NOTE

- Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system.
- Water filtration systems can help reduce the presence of contaminants. In addition, some water filtration systems can help reduce the presence of microorganisms or other contaminants with potential health effects.
- We strongly recommend regularly scheduled maintenance and replacement of the filter cartridge in order for the product to perform properly.
- Replace the filter cartridge at least every 3 or 6 months (depending on water quality).
- UF membrane recommended to change every 12 months (depending on water quality).

LIMITED WARRANTY: Manufacturer warrants that this product is free from defects in materials and workmanship. This warranty, together with any and all warranties implied by law, shall be limited to a period of two (2) years from the date of original purchase. This limited warranty does not apply to failures that result from abuse, misuse, alteration or failure to properly comply with installation, or cartridge change instructions. We strongly recommend adding to all point of use filtration systems a Pressure Limiting Valve (PLV-0104 series) to guard against unwanted extreme water pressure events pressure increases, surges, and water hammer which could occur in the water pipes. Not having one installed could mean that if you ever did have to claim damage caused by a burst water filter system, the claim will be denied.

All Aquafilter images, trademarks, logos, and other intellectual property are the sole and exclusive property of Aquafilter, Inc. and may not be used without our express written permission.

**Aquafilter
Manufacturing
Facility**

Aquafilter Inc.
Hunt Valley 21030, USA
us@aquafilter.com

Aquafilter Germany
15234 Frankfurt, Germany
de@aquafilter.com

Aquafilter Europe
91-222 Lodz, Poland
pl@aquafilter.com

